
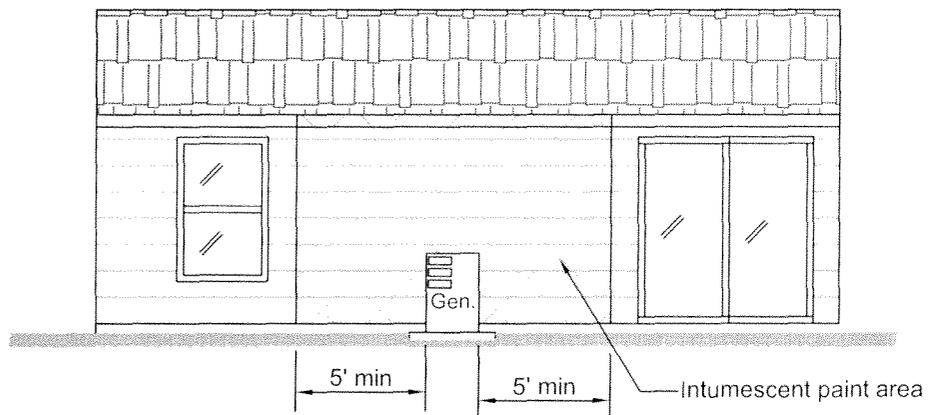


Alternate Design Method for 1 Hour Exterior Wall Protection
When Generator is Placed Less Than 5' From Combustible
Exterior Building Wall.

Apply intumescent paint from the bottom of combustible wall to the top of fascia board.

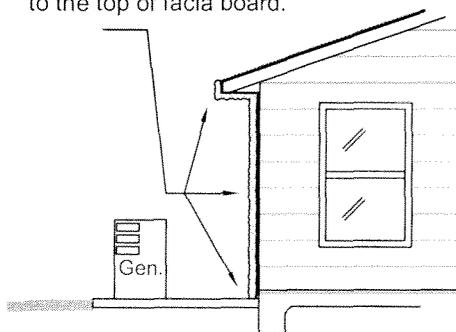

Notes:

1. Place generator not less than 5' away from combustible exterior walls (including wood framed - brick veneer or cement siding), soffits, windows, doors, vents and other openings.
2. In lots located in the 100 year flood prone areas, place generator above the Flood Base Elevation.
3. For generator location, attention should be paid for wind and air currents to prevent carbon monoxide poisoning.
4. Generator shall comply with local noise reduction regulations.
5. Third party special inspection is required for intumescent paint application.
6. In two stories stop the paint at the top of the finished floor of the second story.
7. Generator location shall meet the building line setback requirement.

CITY OF HOUSTON		
<i>Department of Public Works and Engineering</i>		
Generator Location Requirements for Single Family Residence		
Approved by: <i>Thomas J. Foley</i> Building Official		
Date: 5 / 25 / 12	Dwg No: 12-03-R	1 of 1